T74C232

Paging System Transmitter

USER MANUAL

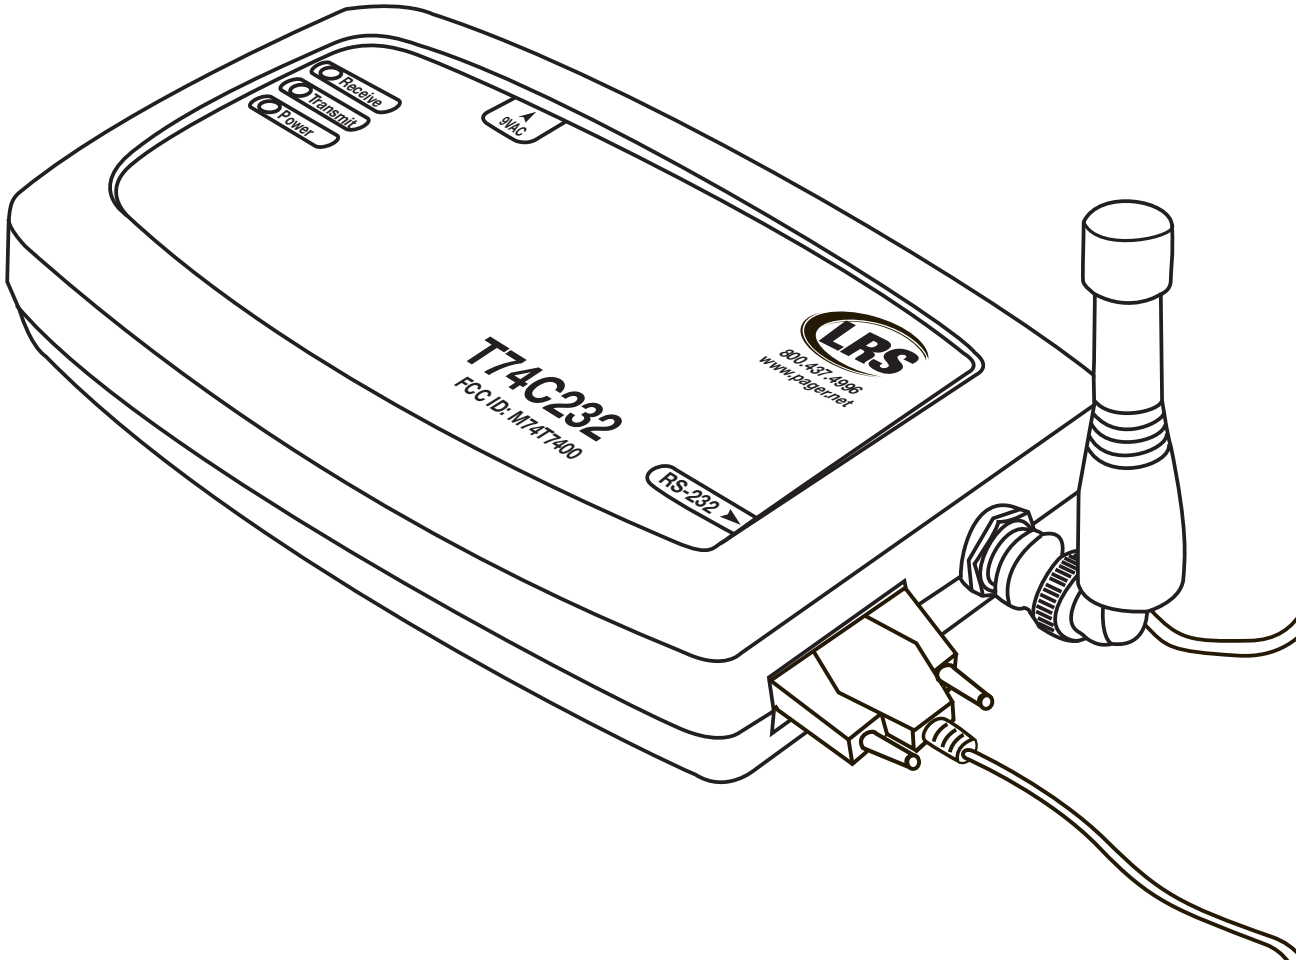

Installation, Warranty and Service Information

Long Range Systems UK Ltd | Link House | Leek Road | Milton | Stoke on Trent | Staffordshire | ST2 7AH | 01782 537000
www.lrspagers.co.uk | www.pagers.co | www.hospitalpagers.co.uk

Table Of Contents

Installation and Setup **2**
Set Restaurant ID 3
Repeat Delay 4
High Power Setting 4
Frequency 5
Service Questions and Answers **6**
Warranty **7**

INSTALLATION AND SETUP

Basic Installation

1) Plug the 10V power supply into the side of the Transmitter.
2) Connect the serial cable from the connector on the Transmitter to the serial port on the host computer.
3) Note the COM Port that the serial cable is connected to on the host computer.
4) Open HyperTerminal on the host computer.
5) Assign a Name for the new connection.
6) Select the COM Port coming from the serial cable.
7) Use the following settings:

Bits per second:	9600
Data bits:	8
Parity:	None
Stop bits:	1
Flow control:	None

8) Type ECHO1 and press ENTER. (This echo function will allow you to see what is being typed.)

Screen View of Typing ECHO

Screen View of ECHO ON

9) You are now ready to use the interface.

Note: At any time, use the STAT command to view any changes.

Set Restaurant ID

This must be set correctly to page pagers.

To set the Restaurant ID, type RID,x and press ENTER twice.

X is the Restaurant ID.

Example: To set an ID of 2, type RID,2 and press ENTER twice.

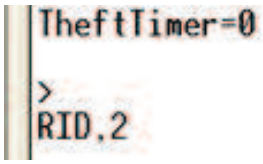

Example Restaurant ID to 2

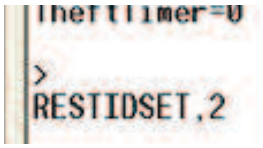

HyperTerminal Output Showing ID as 2

Type STAT and press ENTER

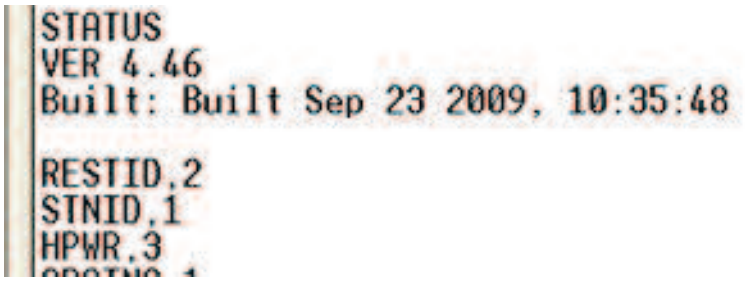

Status View Showing Restaurant ID as 2

Repeat Delay

To turn ON Repeat Delay, type RPTDLY,1 and press ENTER twice.

To turn OFF Repeat Delay, type RPTDLY,0 and press ENTER twice.

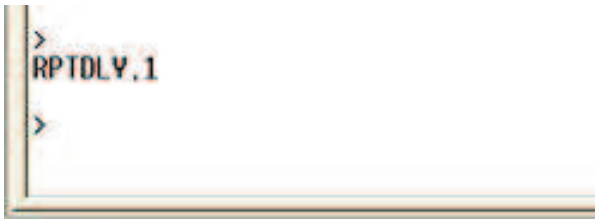

Example Repeat Delay ON

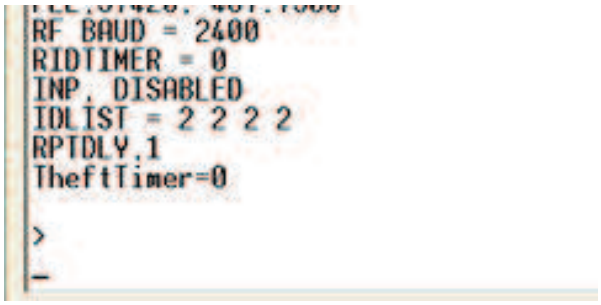

Status View Showing Repeat Delay ON

High Power Setting

To change the Power Setting, type HWPR,x and press ENTER twice.

X is the Power Setting, a value of 1 to 4.

Example: To set a Power Setting of 3, type HWPR,3 and press ENTER twice..

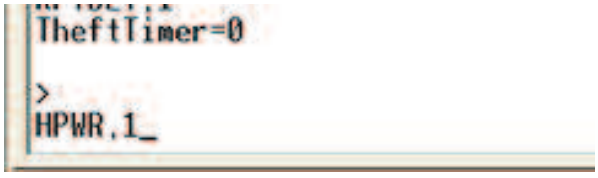

Example High Power Set to 1

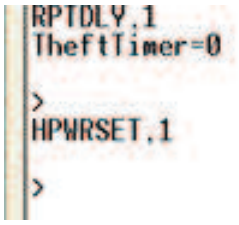

HyperTerminal Output Showing High Power Set to 1

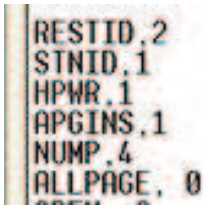

Status View Showing High Power Set to 1

Frequency

CONTACT LRS BEFORE ATTEMPTING TO CHANGE THE FREQUENCY OF THE TRANSMITTER.

To change the Frequency, type SF,xxxxx and press ENTER twice.

XXXXX is the value of the Frequency.

```
RPTDLY,1
TheftTimer=0

>
SF,37420_
```

Example of Set Frequency (PLL) to 37420 (467.750 MHz)

```
RPTDLY,1
TheftTimer=0

>
PLL Set with N=37420,  F=467.7500

>
```

HyperTerminal Output Showing Frequency (PLL) Set to 37420 (467.750 MHz)

```
VOL,64
AM TRANSMISSION OFF, 00
PLL,37420, 467.7500
RF BAUD = 2400
RIDTIMER = 0
INP, DISABLED
IDLIST = 2 2 2 2
```

Status View Showing Frequency (PLL) Set to 37420 (467.750 MHz)

SERVICE QUESTIONS AND ANSWERS

Should your paging system ever fail or should you need additional paging supplies, call Long Range Systems at (800) 437-4996 Monday through Friday 8:30 am to 5:00 pm Central Time.

For weekend or night emergencies:

- Long Range Systems has 24/7 live technical support available
- Please keep in mind that options are limited over the weekend.

Warranty

Long Range Systems, Inc. warrants this product against any defects that are due to faulty material or workmanship for a two-year period after the original date of consumer purchase. This warranty does not include damage to the product resulting from accident, misuse or improper electrical connection. If this product should become defective within the warranty period, we will repair or replace it with an equivalent product, free of charge. LRS will return your product via UPS ground shipping. All warranty claims must be initiated through our customer service department.

Copyright © August 2009, Long Range Systems, Inc. All Rights Reserved

This manual contains proprietary information of Long Range Systems, Inc. (LRS) and is intended for use only by its employees or customers. None of the material contained herein may be copied, reproduced, republished, downloaded, displayed, posted, or transmitted in any form or by any means, including but not limited to, electronic, mechanical, photocopying, recording, or otherwise without the prior written permission of LRS. Additional copies of this manual may be obtained by contacting LRS.

Screen displays, keyboard layouts, hardware descriptions, or software are proprietary to LRS and are subject to copyright and other intellectual property rights of LRS and shall be treated in accordance with the previous paragraph.

All attempts have been made to make the information in this document complete and accurate. LRS is not responsible for any direct or indirect damages or loss of business resulting from inaccuracies or omissions. Specifications and other information contained within this document are subject to change without notice.

Long Range Systems, Inc. reserves the right to make changes without further notice to any products herein. LRS, Inc. makes no warranty, representation or guarantee regarding the suitability of its products for any particular purpose, nor does LRS, Inc. assume any liability arising out of the application or use of any product or circuit, and specifically disclaims any and all liability, including without limitation consequential or incidental damages. "Typical" parameters that may be provided in LRS, Inc. data sheets and/or specifications can and do vary in different applications and actual performance may vary over time. All operating parameters, including "Typicals", must be validated for each customer application by customer's technical experts. LRS, Inc. products are not designed, intended, or authorized for use as components in systems intended to support or sustain life, or for any other application in which the failure of the LRS, Inc. product could create a situation where personal injury or death may occur. Should Buyer purchase or use LRS, Inc. products for any such unintended or unauthorized application, Buyer shall indemnify and hold LRS, Inc. and its officers, employees, subsidiaries, affiliates, and distributors harmless against all claims, costs, damages, and expenses, and reasonable attorney fees arising out of, directly or indirectly, any claim of personal injury or death associated with such unintended or unauthorized use, even if such claim alleges that LRS, Inc. was negligent regarding the design or manufacture of the part, device or system.

EU DECLARATION OF CONFORMITY

We, Long Range Systems hereby declare under our sole responsibility that the T74C232 paging transmitters and on-site pagers comply with the essential requirements in the European RE&TTE Directive 1999/5/EC of the European Parliament of the Council of 9 March 1999 on radio equipment and telecommunication terminal equipment and the mutual recognition of their conformity. The following standards were utilized:

ETS 300 224: 1998

EN 301 489-2: 2002

EN61000-3-2: 1998

EN 61000-3-3: 1995

EN 60950: 1992 with A1, A2, & A3